
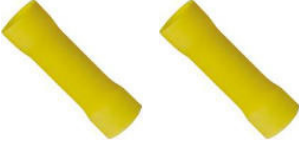
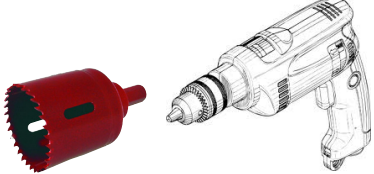




## 3.5" Radiance™ Light Installation Instructions

(Part #'s: 69343)

### PARTS NEEDED:


		
<p>Radiance Overhead Light</p>	<p>Butt Splice Connectors (not provided)</p>	<p>Power Drill w/ Hole Saw Bit</p>

### Safety Instructions

- Disconnect power before installing, adding or changing any component.
- To avoid a hazard to children, account for all parts and destroy all packing materials.
- Light is rated for interior installation only, do not install in wet locations.
- Operating Voltage: 10 - 14V DC

#### 1. Determine the installation location and drill a hole.


Mounting Method	Cutout
Leaf Spring/Spring	2-5/8"
Screw	2-1/2"

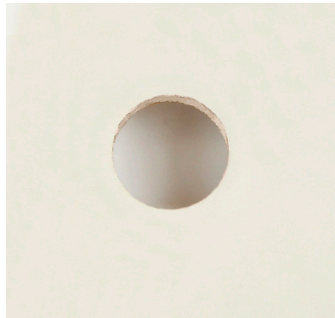

#### 3. Install and test the light.



#### 2. Using the wiring diagram below to wire the light to the units power.

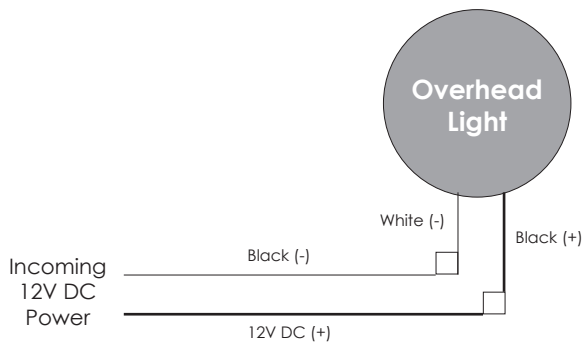

For warranty information please visit [www.itc-us.com](http://www.itc-us.com)

3030 Corporate Grove Dr • Hudsonville • MI • 49426

Phone: 616-396-1355 • [www.itc-us.com](http://www.itc-us.com) • [sales@itc-us.com](mailto:sales@itc-us.com) • DOC #:710-00077 Rev A • 06/06/18